



Nordic
Garden
Parts

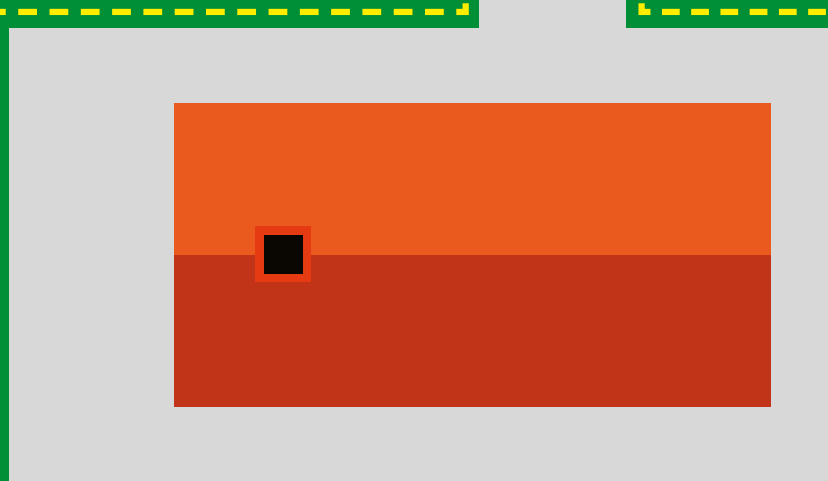

No Go
ZONE CONTROL



Nordic
Garden
Parts



INSTRUCTIONS

Instructions for correct installation

Please use the wire colourcodes for identification, correct assembly and connecting to the perimeterwire

- ⇒ The zonecontrol wires are blue, brown and yellow
- ⇒ The brown wire must be connected on the lefthand side, where the perimeterwire is cut
- ⇒ The blue wire must be connected on the righthand side, where the perimeterwire is cut and at the same time to the wire, coming out from the "no-go" zone
- ⇒ The yellow wire must be connected to the perimeterwire, going counterclockwise and surrounding the "no-go" zone
- ⇒ The bracket can be mounted on a tree, a wall or on a pole
- ⇒ Make sure that all connectors are secured under ground
- ⇒ The in and out coming wires ,connecting the no-go zone, must be put and secured underground, and placed very close together - with zero distance
- ⇒ If the "no-go" zone is a dead end - the yellow wire must be connected to the crossing perimeterwire

